


INOX SUDOPERI NAČINI UGRADNJE

SINKS - WAYS OF MOUNTING

PORAVNATA UGRADNJA flushmount mounting

1. Prije rezanja radne ploče provjerite odgovaraju li dimenzije sudopera predviđenom izrezu. *Before cutting the counter top please make sure the actual size of sink and cut out sizes are matching each other.*
2. Izrežite ploču prema izreznim veličinama i izglodajte je prema debljini sudopera. *Cut the counter top according to the cut out sizes and grind it according to the sink thickness.*
3. Stavite malo silikona na rubove izreza na radnoj ploči. *Put some silicone on edge of cut counter.*
4. Umetnite sudoper u ormarić i labavo pričvrstite kopčama za radnu ploču. *Put your sink into the cabinet and fix it with the clips and clamp to the counter loosely.*
5. Stavite nešto teško na sudoper i pustite da se silikon osuši. *Put some heavy stuff on your sink and let the silicone dry.*
6. Nakon što se silikon osuši, zategnite kopče te očistite ostatke silikona. *When the silicone dries tighten the clips and clamp and clean the exceeded silicone.*


RADNA PLOČA
COUNTER TOP

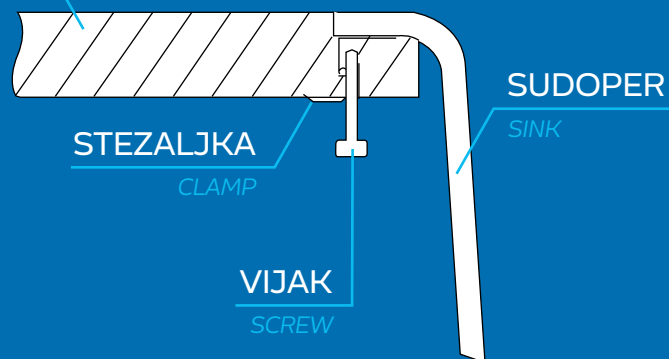

UGRADNJA NA PLOČU (KLASIČNA) mounting on the counter top

1. Prije rezanja radne ploče provjerite odgovaraju li dimenzije sudopera predviđenom izrezu. *Before cutting the counter top please make sure the actual size of sink and cut out sizes are matching each other.*
2. Izrežite ploču prema izreznim veličinama. *Cut the counter top according to the cut out sizes.*
3. Stavite malo silikona na rubove izreza na radnoj ploči. *Put some silicone on edge of cut counter.*
4. Umetnite sudoper u ormarić i labavo pričvrstite kopčama za radnu ploču. *Put your sink into the cabinet and fix it with the clips and clamp to the counter loosely.*
5. Stavite nešto teško na sudoper i pustite da se silikon osuši. *Put some heavy stuff on your sink and let the silicone dry.*
6. Nakon što se silikon osuši, zategnite kopče te očistite ostatke silikona. *When the silicone dries tighten the clips and clamp and clean the exceeded silicone.*

RADNA PLOČA
COUNTER TOP

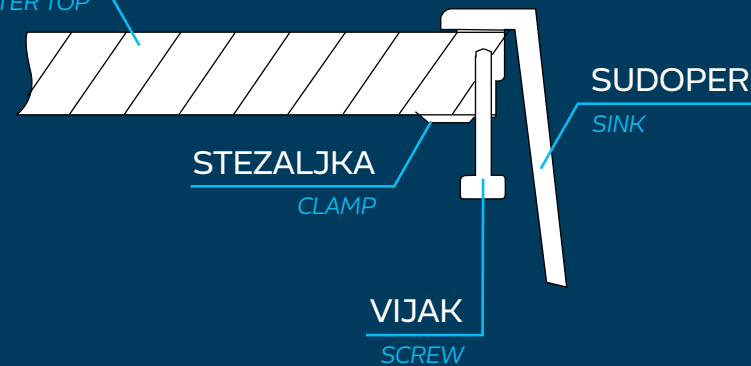

UGRADNJA ISPOD PLOČE mounting under the counter top

1. Prije rezanja radne ploče provjerite odgovaraju li dimenzije sudopera predviđenom izrezu. *Before cutting the counter top please make sure the actual size of sink and cut out sizes are matching each other.*
2. Izrežite radnu ploču prema izreznim veličinama. *Cut the counter top according to the cut out sizes.*
3. Na predviđenim mjestima, bušicom napravite utore na donjoj strani radne ploče. *Open holes back side of counter top with drill.*
4. Umetnite sudoper u ormarić i pričvrstite ga vijcima u utore koje ste napravili bušilicom na donjoj strani ploče. Pomoću stezaljke dodatno učvrstite položaj sudopera. *Put your sink into the cabinet and fix it with the screw into the nest you opened on your counter top, use clamp to keep the position.*

RADNA PLOČA
COUNTER TOP

