

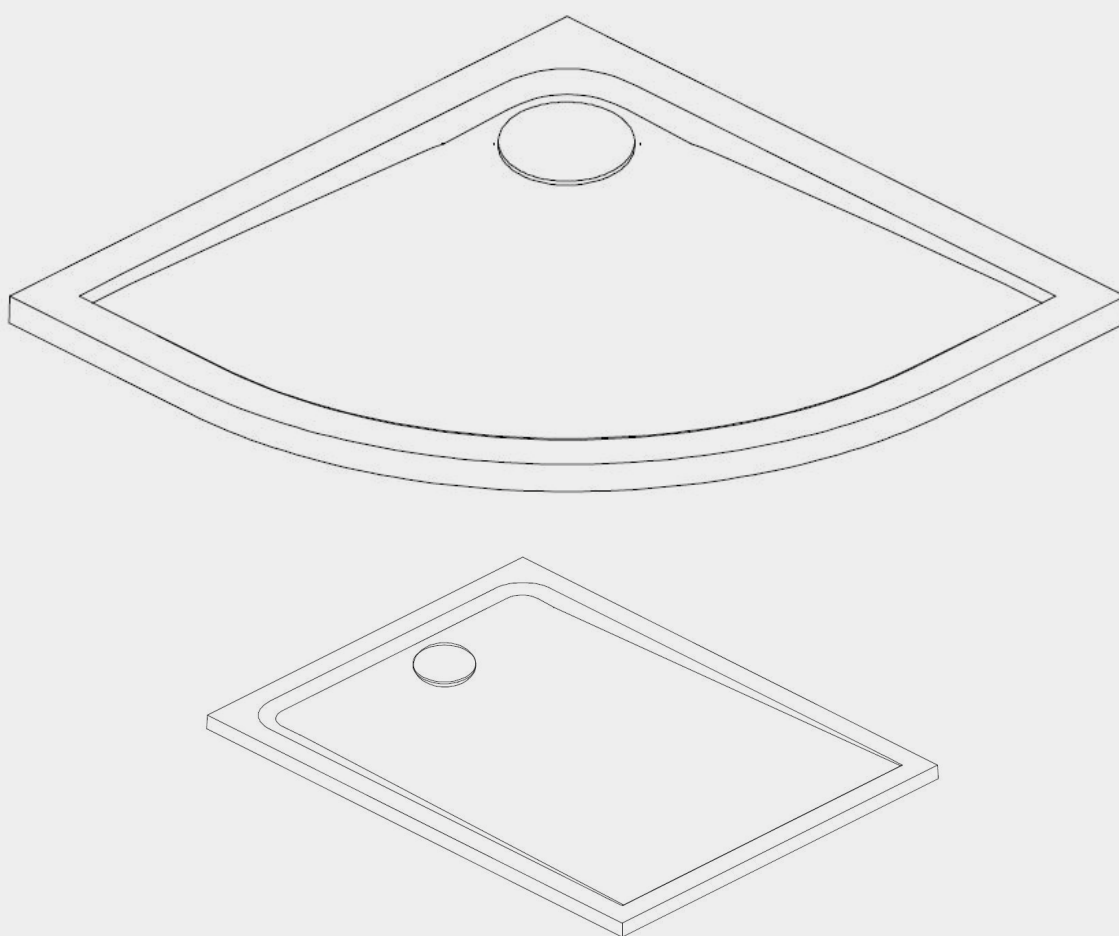
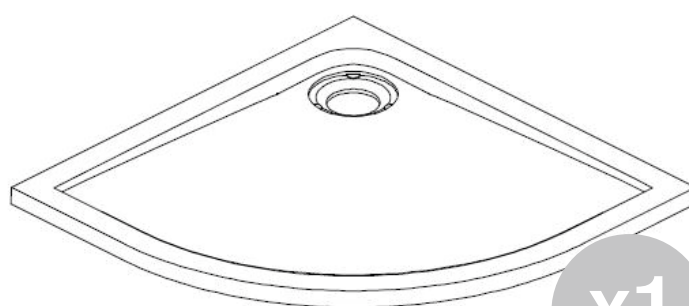
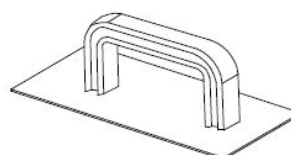



VOXORT

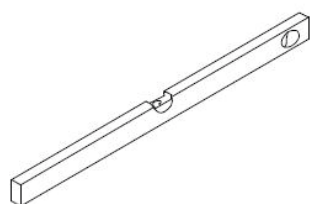


(HR) Upute za montažu tuš kade Larenn

(SLO) Navodila za montažo tuš kad Larenn

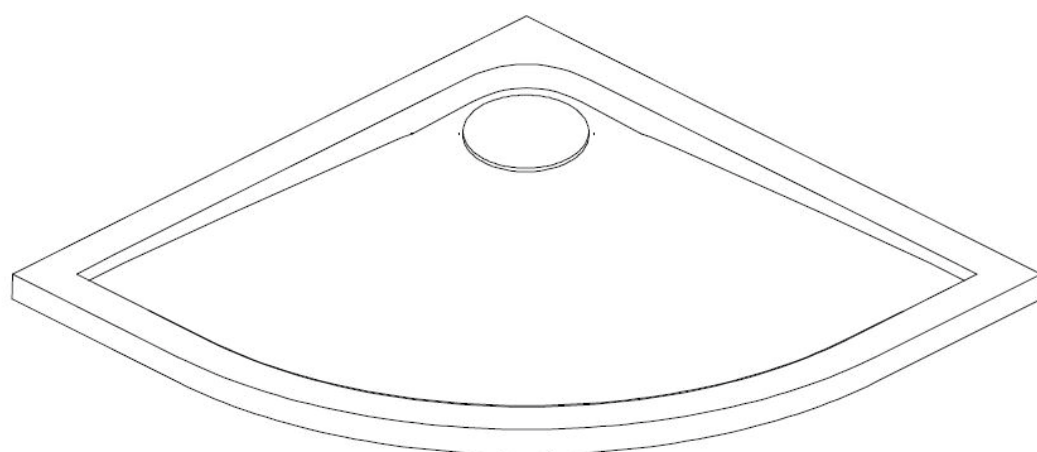







x1

1

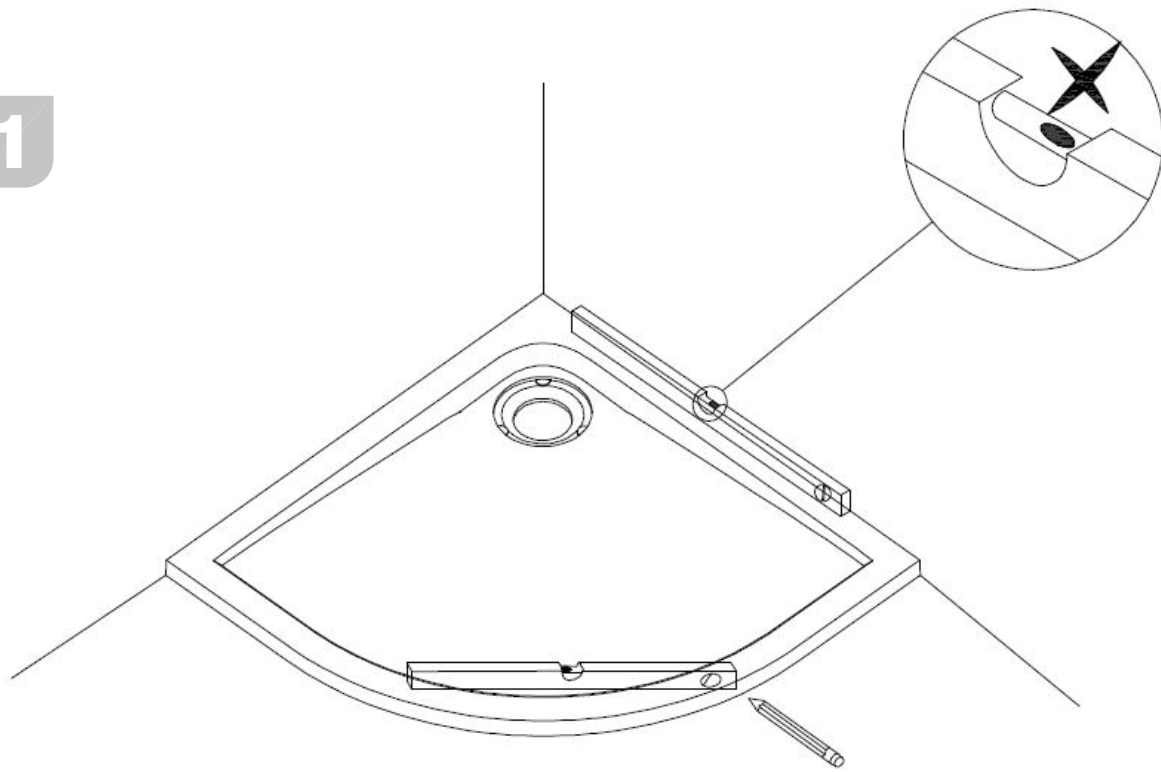


2

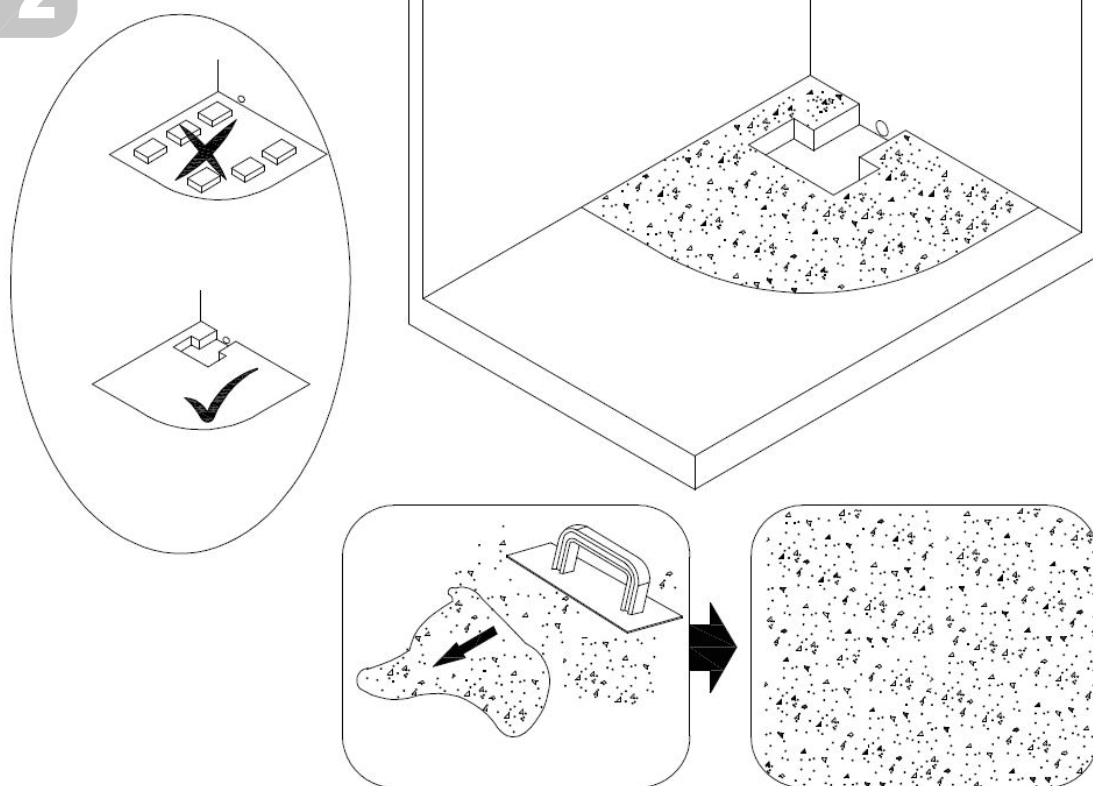


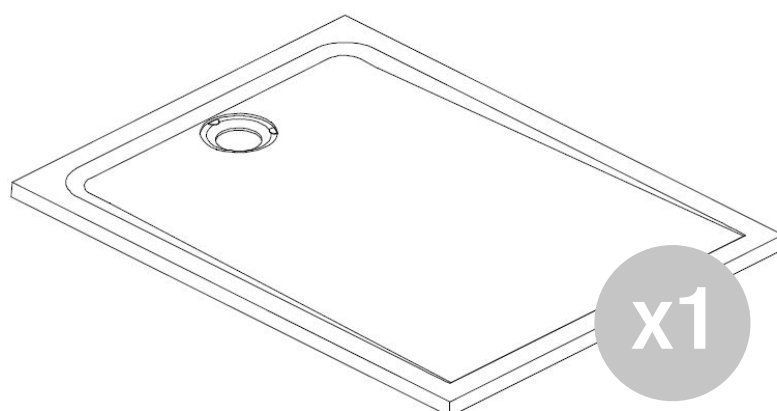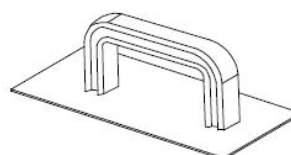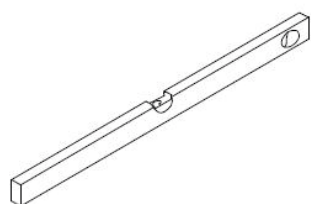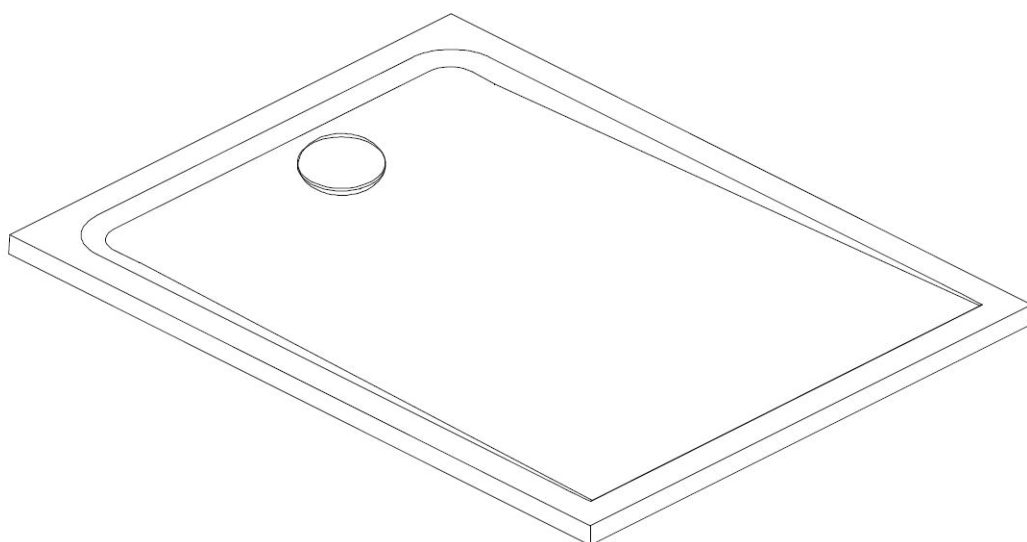

1

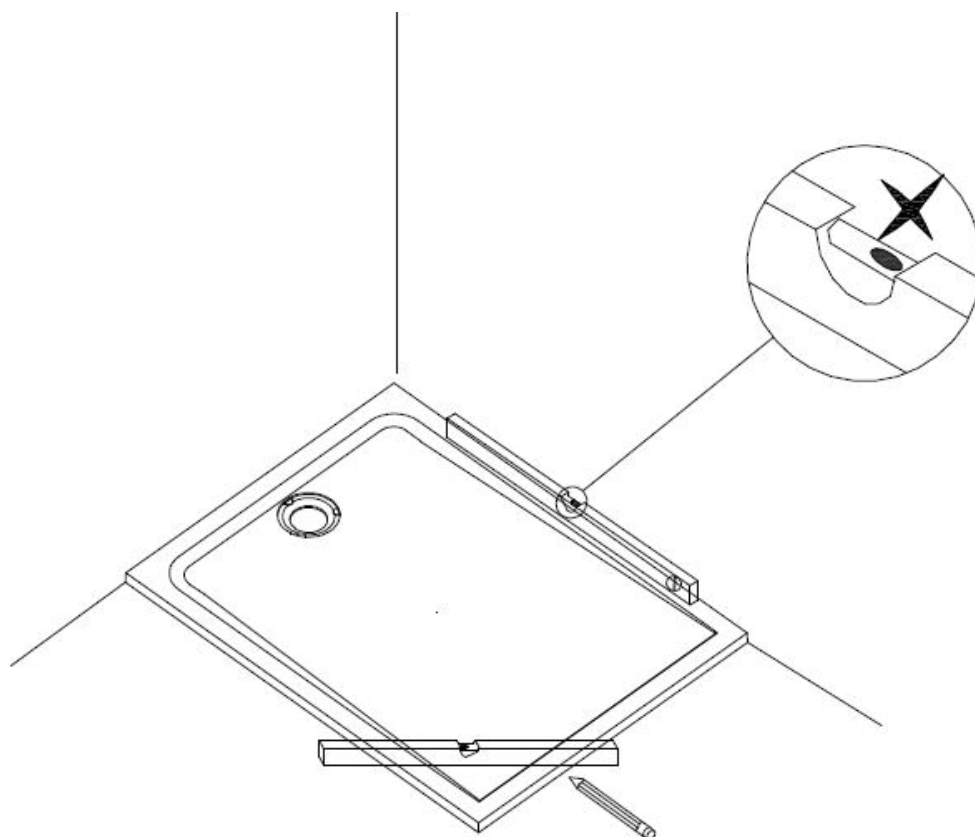




2

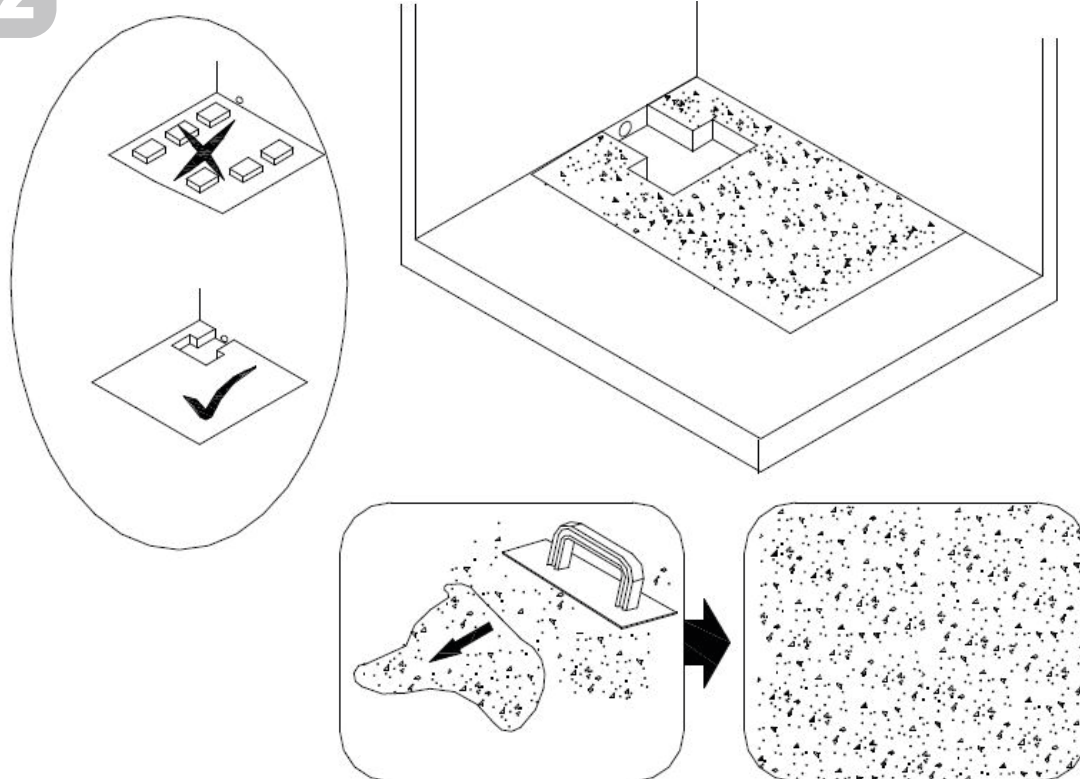

3



niskoekspandirajuća
pjena / montažna pur pen
(low expansion)

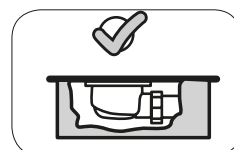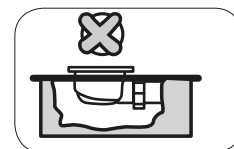
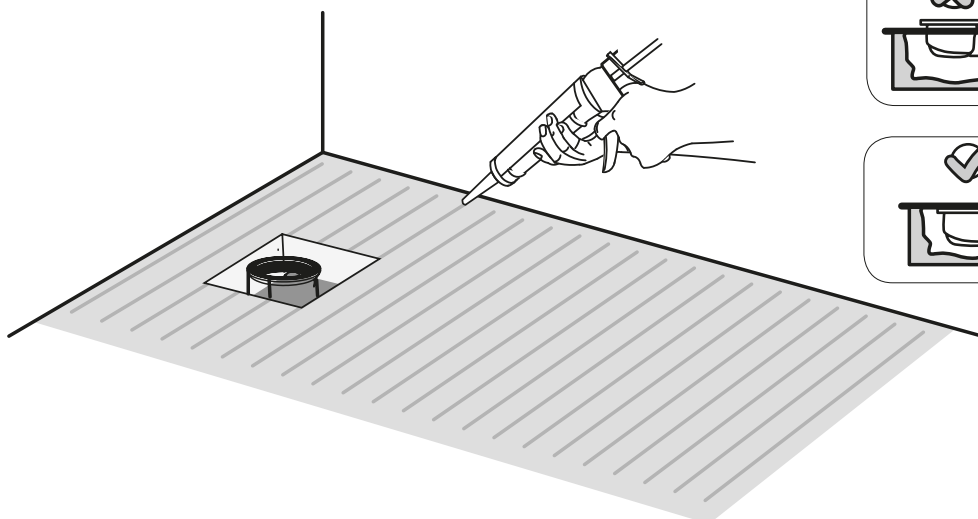


4

NAPOMENA/ NAVODILO:



Tuš kada mora cijelom svojom površinom biti utisnuta u građevinsko ljepilo ili u niskoekspandirajuću građevinsku pjenu.

Tuš kad mora bit zmontirana na lepilo ali montažno pur peno (low expansion).

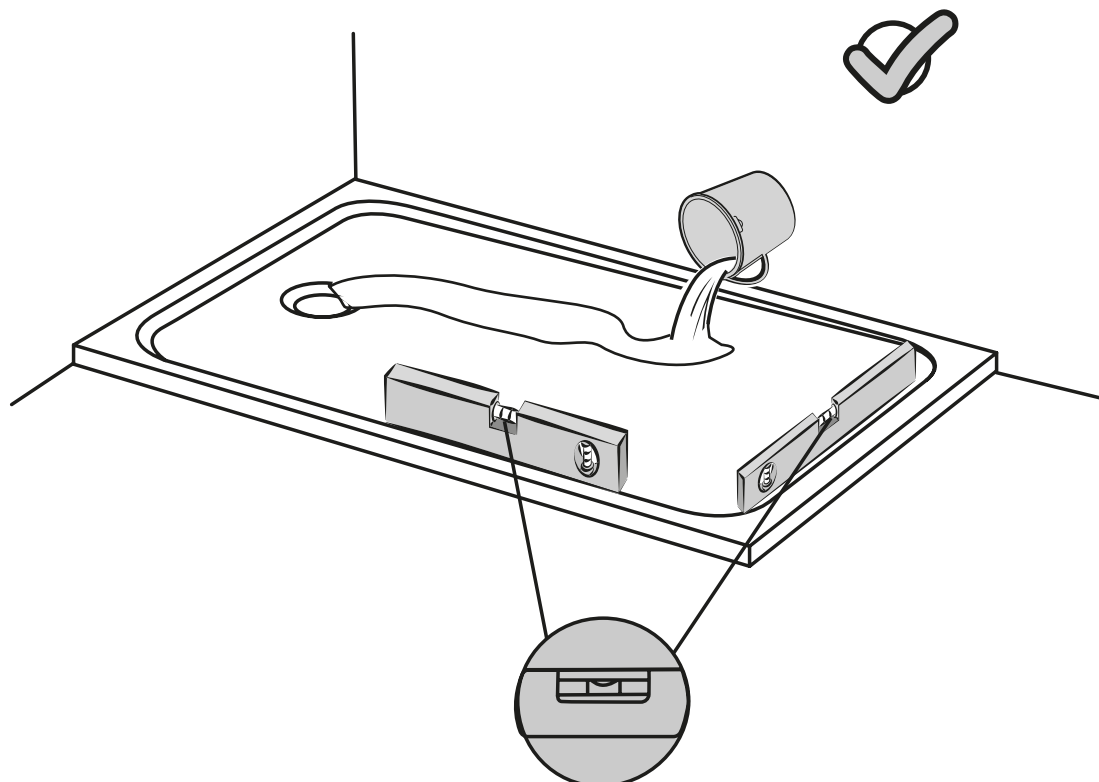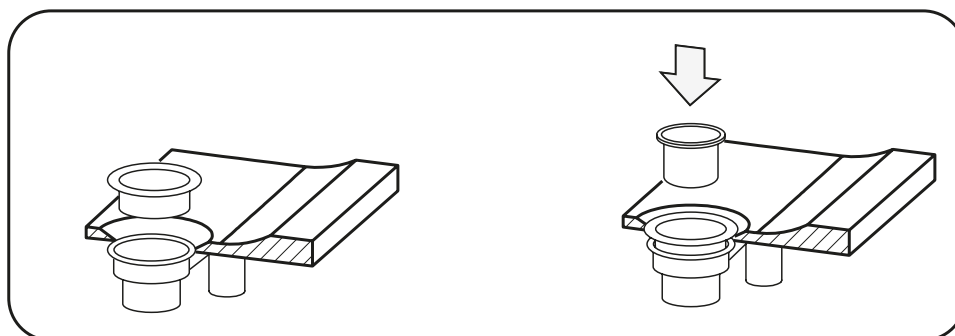


5

5

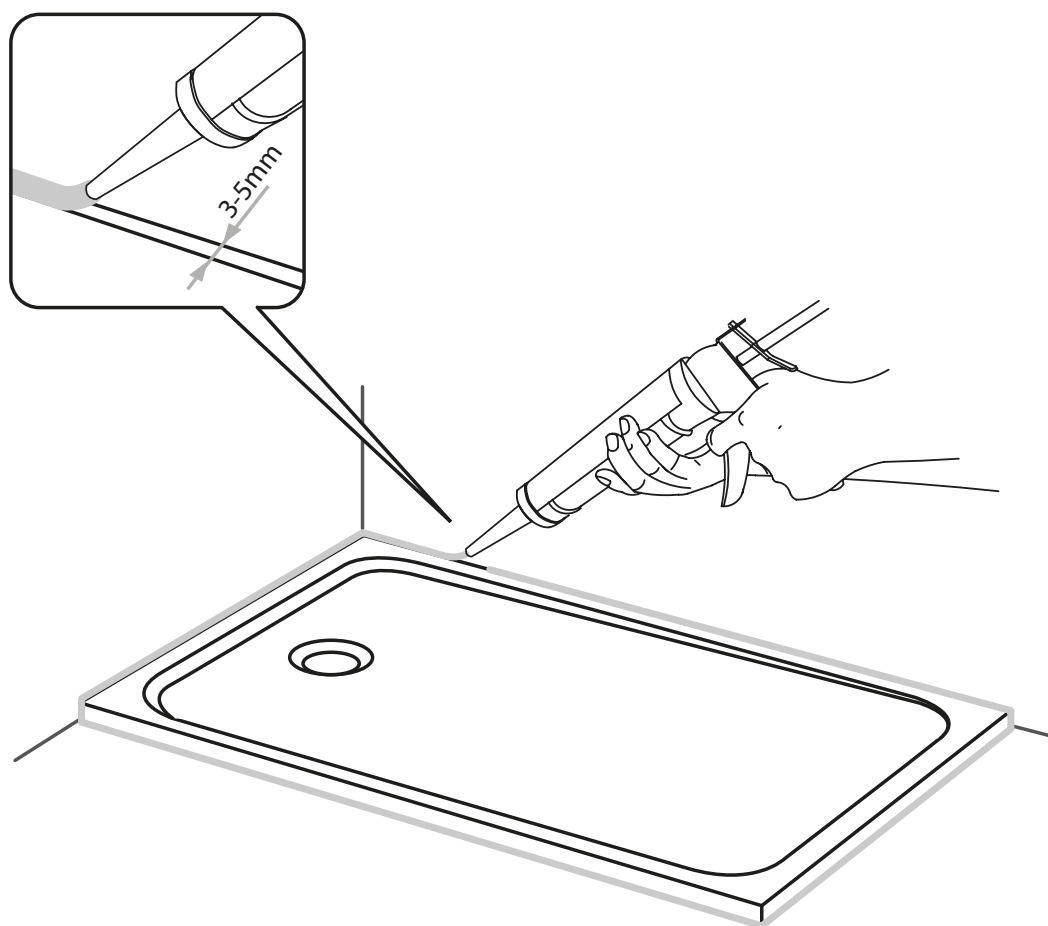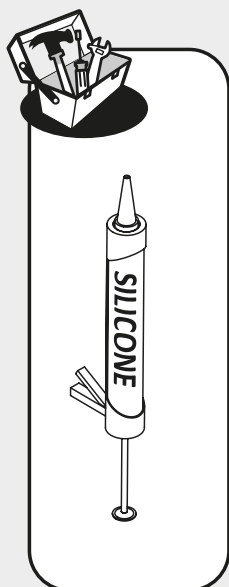

24h

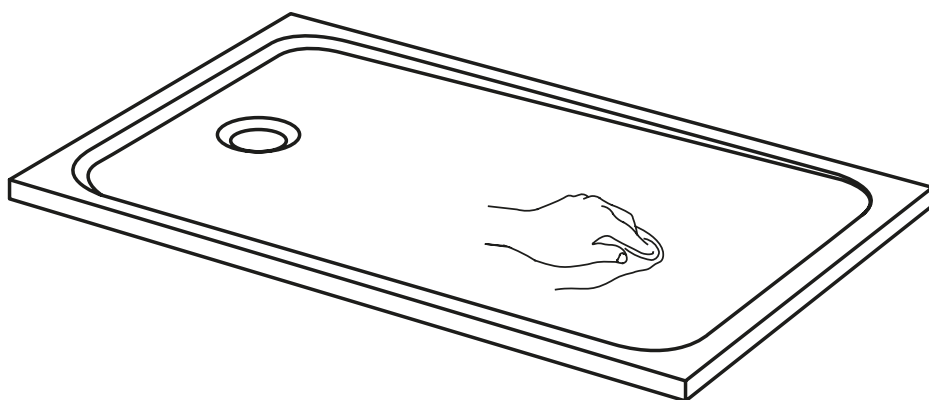

6